



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS CAMEDIA P-11. You'll find the answers to all your questions on the OLYMPUS CAMEDIA P-11 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OLYMPUS CAMEDIA P-11
User guide OLYMPUS CAMEDIA P-11
Operating instructions OLYMPUS CAMEDIA P-11
Instructions for use OLYMPUS CAMEDIA P-11
Instruction manual OLYMPUS CAMEDIA P-11

OLYMPUS®

CAMEDIA

DIGITAL COLOR PRINTER

P-440

REFERENCE MANUAL

ENGLISH



[Your user manual](#)
[OLYMPUS CAMEDIA P-11](#)

Manual abstract:

7 qPaper Cassette Plate Paper guide (For A5 wide paper) Feeder cover Plate lever Feeder dust cover (Use this as a cover for protecting the paper when not using the printer for an extended period of time.) Caution · A spacer for protection during transport is attached inside the paper cassette when the printer is shipped from the factory. Remove this spacer when using the printer. · The feeder dust cover is attached to the back of the paper cassette when the printer is shipped from the factory. Do not lose this feeder dust cover since it is used, for example, when not using the printer for an extended period of time. qInk Cassette (Ribbon Holder) Ink Cassette (Ribbon Holder) 8 Printer Installation qPrinter Installation Site Provide a location for installing the printer that is flat and stable and ensures adequate installation space. Install the printer in a location that is able to withstand weight of approximately 15 kg (30 lbs). Provide enough space in front of the printer so that the paper output tray can be pulled out. When actually installing the printer, allow enough room around the printer so that it is at least 10 cm (4) away from the wall. qInstalling the Ink Ribbon Caution · P-400 ink ribbon P-RBN cannot be used in this printer for printing.

1 2 Tear off the center strip on the back of the ink ribbon package along the tear line shown. Open one of the flaps. Caution · When cutting open the cover sheet and tearing back the flaps, do not remove the flaps completely from the package. Removal of the flaps will prevent you from determining the installation direction of the ink cassette (ribbon holder). 9 3 Open the flap on the opposite side.

Caution · Do not allow the ink ribbon package to become deformed and do not take out the ink ribbon directly with your hands. 4 5 Align the installation direction marks (s-t) on the flaps on the ink ribbon package and ink cassette (ribbon holder). Attach the ink ribbon to the ink cassette. (Press the ink cassette onto the ink ribbon until all four locations snap into place.) Tip · The procedure for installing the A6 wide-size passport ink ribbon differs from that of ink ribbon used for ordinary printing.

Follow steps 1 through 3 previously stated, but replace steps 4 and 5 with the following procedure. Then, continue with steps 6 through 11. Take out the ink ribbon from the ink ribbon package and remove the stoppers from the bobbin of the ink ribbon. Green Attach the bobbin of the ink ribbon to the ink cassette (ribbon holder) until it clicks. White 10 6 Turn the bobbin in the direction indicated by the arrow to take in the slack of the ink ribbon. 7 8 Lower the eject levers on both sides of the printer cover and open the printer cover. Thermal head Sensor Caution · Do not touch the inside of the printer when the printer cover has been opened. · Never touch the thermal head. This can result in burns or a malfunction. · The thermal head sensor is extremely sensitive to static electricity.

Never touch the thermal head sensor since this has the risk of causing a malfunction. Hold onto the ink cassette with both hands while checking the right (R) and left (L) sides of the ink cassette. Caution · Be careful not to touch the ink ribbon directly with your fingers. Tip · Adjust the upper and lower bobbins of the attached ink ribbon so that the ink ribbon is taut and free of twisting. 11 9 Install the ink cassette in the printer. Push the right side (R) of the ink cassette onto the right wheels of the printer. 10 Push in the left (L) side. (Firmly push all the way into the printer.) the printer 11 Close completely cover.it(Close the printer cover until snaps closed.

) 12 qInstalling the Paper Cassette 1 The feeder dust cover is attached to the back of the paper cassette. Tip Feeder dust cover · The feeder dust cover is taped to the paper cassette when shipped from the factory. Since this feeder dust cover is used when not using the printer for an extended period of time, make sure not to lose it. 2 3 4 Open the feeder cover of the paper cassette..



[Your user manual](#)
[OLYMPUS CAMEDIA P-11](#)